




Evo Force 1 Streaming Box

Using the TiVo Stream 4K Remote Control

TiVo Stream 4K comes equipped with a full-featured remote that helps get you to your favorites fast and easy, and automatically connects with your TV or AV receiver to let you control their volume and mute functions. It even has access to Google Assistant!

- 1 **POWER** turns television on or off.
- 2 **VOL** and **MUTE** control the TV audio.
- 3 When using the TiVo Stream app, the **TiVo button** opens the menu (Guide, My Shows, and more). From the Android TV home screen or any other app, the TiVo button opens the TiVo Stream app.
- 4 While navigating the TiVo menus, **UP**, **DOWN**, **LEFT**, or **RIGHT** move around. While watching video, LEFT and RIGHT are used for playback control (pause, fast-forward, rewind). Availability of playback control depends on the show and streaming service.
- 5 **OK/SELECT** chooses items on screen. A long press on a show title brings up an option menu. While watching video, OK/SELECT pauses/unpauses video.
- 6 **BACK** goes back to the previous screen. If no previous screen is available, BACK opens/closes the TiVo menu. In some streaming services, BACK returns to the TiVo Home screen.
- 7 The **circle button** opens the Android TV home screen.

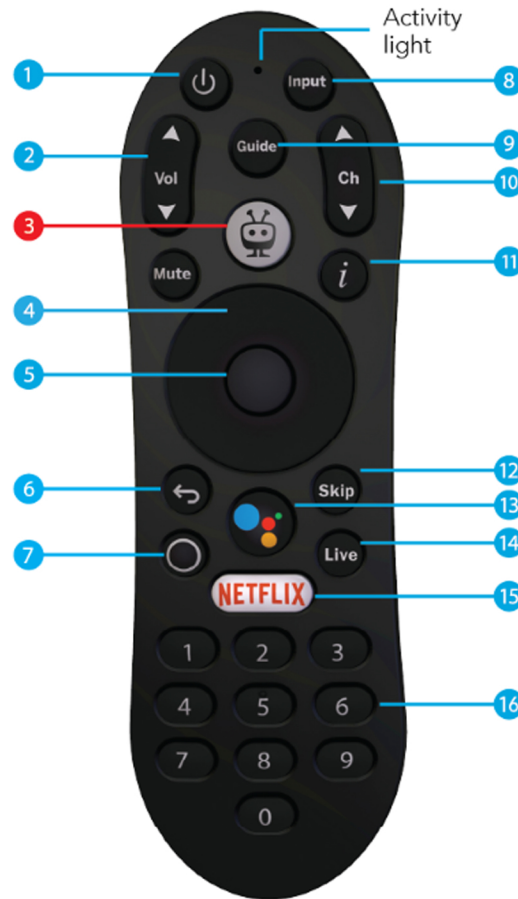

- 8 **INPUT** changes your video source (TiVo Stream 4K, gaming system, etc).
- 9 **GUIDE** takes you to the program guide.
- 10 **CHANNEL UP/DOWN** change the channel while watching live TV, and lets you scroll through the program guide quickly.
- 11 **"i" (Info)** displays show information when watching TiVo+. A long press opens the Accessibility settings screen (does not apply when watching video).
- 12 **SKIP** jumps forward 30 seconds while watching video. Availability depends on the show and streaming app.
- 13 Press and release the **Google Assistant button** to talk to Google.
- 14 **LIVE** jumps to the last watched channel from any TiVo Stream app screen, the Android TV home screen, and other apps on your device.
- 15 **NETFLIX** launches the Netflix app.
- 16 **NUMBER BUTTONS** can be used to quickly enter numbers (for instance, when entering a password).